



Electric Countertop Burners



Models: EB100, EB102

11/2010

Please read and keep these instructions. Indoor use only.

Thank you for purchasing and using our Avantco electric countertop range. To make best use of this product and avoid damage and injury, please read this manual carefully before using the machine, and keep it handy for future reference. The electric single or double burner range combines the advantages of stylish design, efficient construction, ease of operation and simple maintenance.

Important Safeguards

Whenever used, the following items identify safety and property damage messages, and designate a level of hazard seriousness.



This safety alert symbol alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER: Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Use of this signal word is limited to the most extreme situations.

WARNING: Indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or property/product damage. It also alerts against unsafe practices.

NOTICE: Addresses practices not related to personal injury, such as product and/or property damage.



Warning

To reduce the risk of fire, electric shock or serious personal injury:

- Keep the product out of the reach of children and pets. This product is not intended for use by children. Supervision is necessary when using any appliance near children.
- Do not touch hot surfaces. Always use the handle and knobs of the product.
- Do not immerse the power cord, plug, or product in water or other liquids.
- Always ensure the range is unplugged from the electrical outlet and allowed to cool before moving or cleaning it. It is best to unplug the product when it is not in use.
- To unplug the unit, make sure all controls are “off”, and then remove the plug from the wall outlet by pulling directly on the plug.
- Do not plug or unplug the product from the electrical outlet with a wet hand.
- Do not leave the product unattended while it is in use.
- Do not place the range on or near a hot gas or electric burner.
- Do not operate the product if it has a damaged or cut power cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped in or exposed to water.
- This product has no user-serviceable parts; do not attempt to examine or repair it yourself. Only qualified service personnel should perform any repairs.

Caution

To reduce the risk of personal injury:

- This product is intended solely for indoor heating of foods for human consumption. Do not use the product outdoors or for any other purpose than intended.
- Do not allow the power cord to hang over the edge of a table or counter where it may be tripped over or pulled.
- Do not let the cord touch hot surfaces.
- Always operate the product on a flat, level, stable, heat-resistant surface.

Special Instructions

- To avoid a circuit overload when using this product, do not operate other high wattage products on the same electrical circuit.
- A short power supply cord is provided to reduce the risk of becoming entangled or causing a tripping hazard. Use of an extension cord is not recommended.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature, as the plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Do not alter the plug or attempt to defeat the safety purpose of the plug.

To Use

WARNING: The entire product will become extremely hot when in use and will remain hot immediately after use.

1. Ensure the Control Knob(s) is in the “OFF” position, and then place the product on a flat, level, heat-resistant surface.
2. Insert the plug into a standard 120V AC electrical outlet.
3. Place cookware onto the heating element(s), and then rotate the Control Knob to the desired heat level (LO, MED, HI).

WARNING: Do not use a pot/pan that is wider than the burner.

4. To turn off the product, rotate the Control Knob to the “OFF” position and unplug it from the electrical outlet. Always unplug the product when not in use.

Care and Maintenance

WARNING: To avoid electrical shocks or burn hazards, always make sure the product is unplugged from the electrical outlet and allowed to cool completely before cleaning.

NOTICE: Do not attempt to remove the heating element(s).

- Use a damp cloth/sponge and a mild detergent to clean the product’s surfaces, ensuring that no detergent remains on the heating element(s).

WARNING: Do not immerse the product in liquid or place in a dishwasher.

NOTICE: Do not use abrasive cleaners/pads to clean any part of the product.

- Tip up the heating element(s) to clean the drip pan(s).

Electrical Specifications

Name	Single Burner	Double Burner
Model	EB100	EB102
Voltage	120V	120V
Frequency	60 Hz	60 Hz
Wattage	1000W	1500W (2 x 750W)
Amperage	8.3A	12.5A

Limited One Year Warranty

All equipment, which is sold under the AVANTCO trademark and used for commercial purposes, is warranted against defects in materials and workmanship. The warranty runs for one year from the date of original installation and is for the benefit of the original purchaser only. All other Warranties, Expressed, or Implied, Statutory or Otherwise, including Without Limitation any implied Warranty of Merchantability or Fitness for Purposes are excluded. The Seller shall in no event be liable for direct, indirect or consequential damages in connection with AVANTCO commercial products.

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set – up, supervision when required of if the equipment is installed or operated in any manner contrary to the installation and operating instructions.