



W51



W53



W52

Dual Hot Plate Decanter Warmer – User Manual

Models: W51 (SHP), W52 (THP), W53 (LHP)

11/2010

Please read and keep these instructions. Indoor use only.

Specifications

Model: W51 (SHP)
Electrical: 120V, 60Hz; 100W
Agency Listings:

Model: W52 (THP)
Electrical: 120V, 60Hz; 200W
Agency Listings:

Model: W53 (LHP)
Electrical: 120V, 60Hz; 200W
Agency Listings:



 ***Read and understand all instructions before using this appliance. CAUTION! HOT SURFACE!***

Warnings

- This appliance is designed for commercial use only.
- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- This appliance is designed to keep liquids hot. Do not use it to heat up cold liquids.
- Never immerse the appliance in water.
- Do not heat empty decanters on this appliance.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a qualified service agent.
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

Operation

Carefully unpack the decanter warmer and inspect it for damage.

- Place the warmer on a level surface.
- Place filled decanters onto the hot plates.
- Turn the power switch to “ON.” The indicator on the switch should light up, and the hot plates will begin to warm up.
- Always turn the decanter warmer “OFF” when it is not in use or when the decanters are empty.

Cleaning

Regular cleaning will help prolong the warmer's life and preserve its appearance.

- Always unplug the warmer and allow it to cool off before cleaning, and wipe with a damp cloth.
- Do not use harsh or abrasive chemicals, metal tools, or scouring agents as they may cause damage to the appliance.
- Never immerse the appliance in water.